



Running the engine with a low oil level can cause engine damage. Please check engine oil frequently.

1

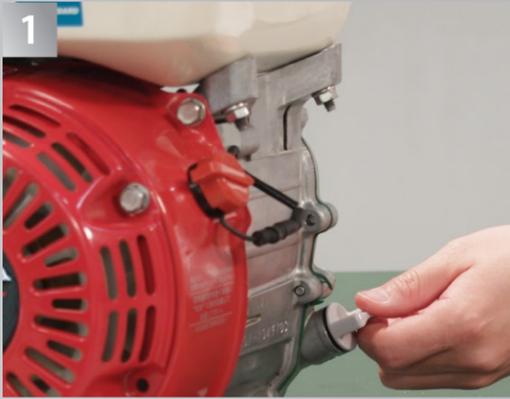

With the engine on a level surface, remove the oil filler cap/dipstick.

5

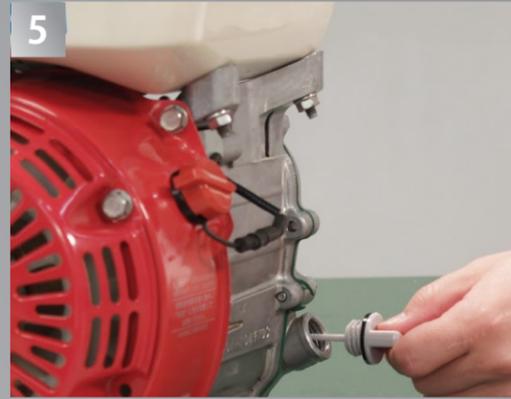

Insert the oil filler cap/dipstick into the oil filler neck as shown, but do not screw it in.

2



6




If the oil level is near or below the lower limit mark on the dipstick, fill with the recommended oil to the upper limit mark. See Maintenance points for oil recommendations.

3



Wipe the dipstick clean.

7

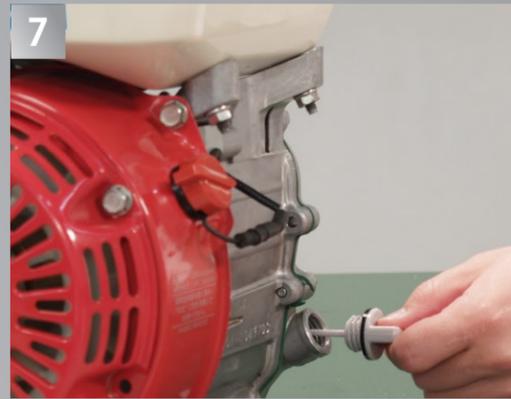

Reinstall the oil filler cap/dipstick.

4

